



KidJamz™
by **MEE** audio®



SAFE LISTENING HEADPHONES FOR KIDS

ABOUT OUR VOLUME-LIMITING TECHNOLOGY

Regular headphones and earphones can easily exceed 85dB by as much as 30% when used with portable audio devices and may cause permanent hearing damage with lengthy or repeated exposure. A proprietary volume limiter built into the structure of the KidJamz speakers maintains the sound pressure level (SPL) at 85dB* as recommended by the American Academy of Otolaryngology and other medical organizations**, protecting young ears and helping create lifelong good listening habits.

* 85dB limit is based on an industry-standard 1mW audio output of a typical portable audio device

** visit entnet.org for more info

OPERATING THE VOLUME LIMITER ON/OFF SWITCH

KidJamz feature a concealed switch on the left ear cup that allows the volume limiter to be disabled in noisy environments. This switch is protected against accidental activation while allowing parents to control the listening experience. There are two positions for the switch: **volume-limited (85dB)**, designated by () , and **unlimited**, designated by ()). Any long and thin object, such as a toothpick, can be used to operate the switch.

Note: Using headphones for extended periods of time at higher volume levels may result in listening fatigue and hearing damage. When using the KidJamz in unlimited mode, set the volume on the connected phone, computer, or mp3 player to the minimum before connecting the headphones. Raise the volume gradually until an acceptable level is reached. Children should take a 10-minute break every hour of listening.



MICROPHONE & REMOTE

The integrated microphone and remote can be used during phone calls and to control media playback.

Basic remote operation for Apple® iPhone®, iPad®, iPod®, and most Android™ devices:

Function	Operation
Answer incoming phone call	Press the remote button
End phone call	Press the remote button
Play media*	Press the remote button
Pause media	Press the remote button
Skip to next track**	Double-press the remote button
Restart the track / previous track**	Triple-press the remote button
Activate Siri®/Voice control/Voice dialing**	Press and hold the remote button

* You may need to open the media player application for initial playback to start.

** Not all devices and applications support this functionality.

CARE INSTRUCTIONS

- Clean with a soft cloth, damp with diluted soap water solution if necessary. Do not use chemical cleaners
- Do not expose to liquids. If the device comes in contact with liquids, quickly wipe away. If submersed in water, do not use the device until completely dried. Note: liquid submersion voids the warranty.

WARRANTY

MEE audio KidJamz headphones are covered by a 1-year manufacturer warranty. For more information, visit MEEaudio.com/support.



KidJamz™
by **MEE** audio®



www.MEEaudio.com