

USER MANUAL



SPORTS EARPHONES WITH MEMORY WIRE

www.MEEaudio.com/sport

IMPORTANT

Please read this manual in its entirety to ensure best fit and sound.

visit www.MEEaudio.com/fit for fit tutorial videos and additional info.

CONFIGURING FOR YOUR EARS: EARTIPS

Multiple sets of eartips are included to ensure you get the best fit with your MEE audio sports earphones. We recommend trying all of the included eartips. If you experience tinny sound or a lack of bass, try different eartips.

The correct eartip for your ear will:

- Allow the earphone to fit flush in the ear
- Seal with your ear canal and reduce outside noise when inserted
- Provide good bass response



Install eartips as shown. Make sure eartips are installed securely before use.

CONFIGURING FOR YOUR EARS: MEMORY WIRE

MEE audio sports earphones feature an over-the-ear fit with a flexible “memory wire” section located near the earpieces. Using the memory wire correctly will ensure the most comfortable and secure fit.

1.1

Identify the right and left earpieces as indicated by the “L” and “R” markings. They are not interchangeable.



1.2

Straighten the memory wire and put each earpiece in the corresponding ear



2.1

Adjust each earpiece until it fits flush in the ear and the eartip seals in the ear




2.2

Holding the earpiece in place, bend the memory wire around your ear to achieve a conforming fit



3

While pulling the cable gently with one hand, squeeze the memory wire behind your ear with the other hand until the fit is tight and secure

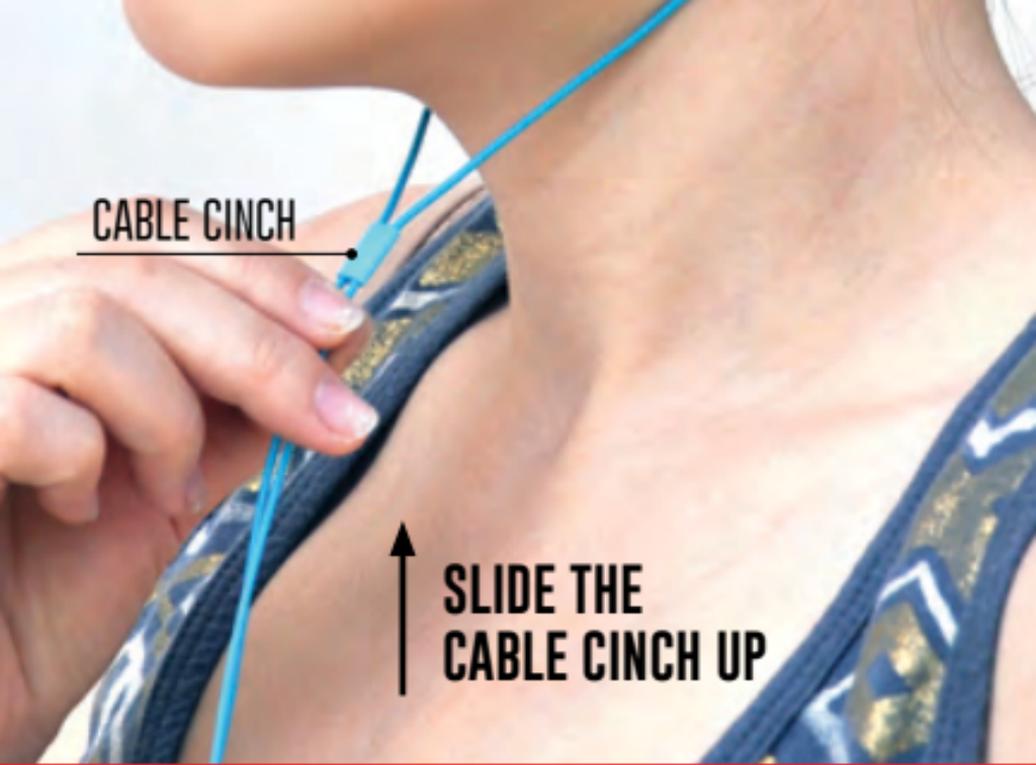

CABLE CINCH

↑
**SLIDE THE
CABLE CINCH UP**

4.1

Tighten the sliding cable cinch to fix the earphones in place for the most secure fit



**SHIRT CLIP
HOLDS CABLE
IN PLACE**

4.2

Use the shirt clip to control cable movement during activities



5

When worn correctly, the earphone sits flush in the ear and the cable is secure behind the ear

SUBSEQUENT USE

After first use, the memory wire will retain its approximate shape for easier future installation.



1

To put the earphones on, pull the earpieces over from behind the ear, placing the memory wire over the ear



2.1

Insert the earpieces into your ears and adjust until a seal is achieved



2.2

Squeeze the memory wire behind your ear until the fit is tight and secure. Use the cable cinch and shirt clip to control cable movement.

Note: If you must remove and reinsert the earphones while working out, avoid getting sweat in the nozzle as this may lead to a temporary reduction/loss of sound.

MICROPHONE & REMOTE USE (M3P, M6P AND S6P ONLY)

Basic Remote Operation

for iPhone®, iPad®, iPod® and most Android™ phones:


Function	Operation
Answer incoming phone call	Press the remote button
End phone call	Press the remote button
Play media*	Press the remote button
Pause media	Press the remote button
Skip to next track**	Double-press the remote button
Restart the track/previous track**	Triple-press the remote button

*You may need to open the media player application for initial playback to start.

**Not all media players support this functionality.

Additional remote functions are available with many devices. Visit MEEaudio.com/phone for complete compatibility and functionality.

VOLUME CONTROL (M6P AND S6P ONLY)

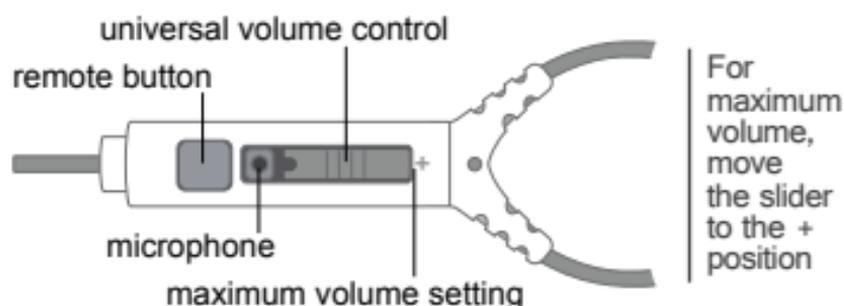

CARE AND CLEANING

- Do not remove from ears or unplug by pulling on the cable. Always grasp the plastic part of the plug or earpieces
- If necessary, clean the earphones with a small amount of hydrogen peroxide on a cotton swab. Swab only the outside of the earphone. Eartips can be removed and rinsed under running water or in hydrogen peroxide. Allow earphones and eartips to dry completely before resuming use.

WARNING

Using headphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds. It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level.

TROUBLESHOOTING

Visit MEEaudio.com/troubleshooting for solutions to common issues.

WARRANTY

MEE audio earphones purchased from authorized retailers are covered by a 1-year manufacturer warranty. Visit MEEaudio.com/warranty for warranty information.





www.MEEaudio.com
support@MEEaudio.com