



# X7 *Plus*

---

## BLUETOOTH® WIRELESS SPORTS IN-EAR HEADPHONES

### USER MANUAL

model: X7Plus



BEFORE FIRST USE WATCH THE  
***HOW TO WEAR FIT VIDEO***

at: <https://goo.gl/Ci9n7J>

Please read this manual in its entirety to ensure best fit and sound.


## PACKAGE CONTENTS

**X7 Plus**Stereo Bluetooth  
Wireless Sports  
In-Ear HeadphonesCarrying  
caseMicro-USB  
charging  
cableUser  
manual3 pairs of  
eartips

## PRODUCT OVERVIEW

# X7 PLUS

Stereo Bluetooth  
Wireless Sports  
In-Ear Headphones

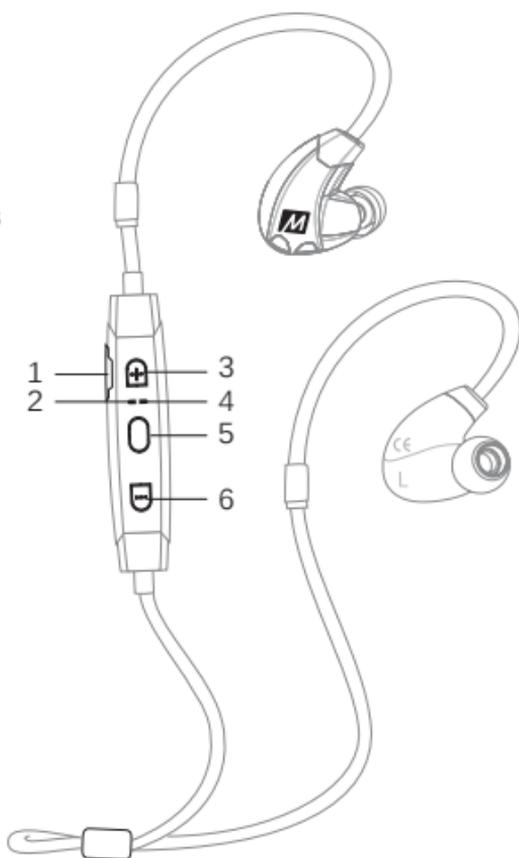

### Remote

- |                           |                                     |
|---------------------------|-------------------------------------|
| 1 Micro-USB charging port | 3 Volume up/skip track button       |
| 2 Status indicator light  | 4 Microphone                        |
|                           | 5 Multifunction button              |
|                           | 6 Volume down/previous track button |


## CHARGING

\*\*\* You must completely charge the headset before the first use \*\*\*

Connect the Micro-USB charging cable to any powered USB port and to the charging port of the X7 Plus, which is located underneath a cover on the remote. Charge time is approximately 2 hours. The status indicator light on the right earpiece will stay red while the headset is charging and turn blue once it is charged and ready for use.

When the battery is low, the headset will say "battery low".

Apple® devices such as the iPhone®, iPad®, and iPod touch® will display an on-screen headset battery indicator when the X7 Plus is connected.

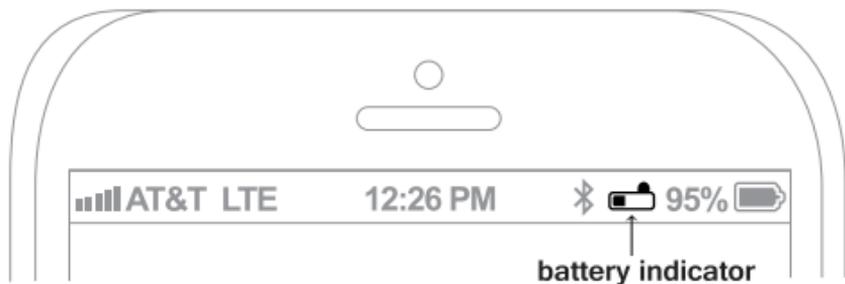

Note: the lifetime of the battery will be significantly reduced if your headset is not charged for a long period of time. It is recommended to charge your headset at least once a month.

### WARNING

For maximum sweat resistance, make sure that the USB port cover is closed completely after charging the headset.

## FIRST USE: SELECTING EARTIPS


The X7 Plus is an in-ear earphone and relies on a tight seal between the eartips and your ear canals to deliver good bass response and overall sound quality. Three sizes of ear tips are included to help you achieve the best fit. We recommend trying all three sizes and selecting the ones with the best sound and comfort for your ears.

### Select eartips that:

- Allow the earphone to fit flush in your ear
- Seal with your ear canal and reduce outside noise when inserted
- Provide the best bass response

### Removing Eartips

Hold the eartip firmly in one hand and the earpiece in the other. Pull the eartip straight off the earphone nozzle.

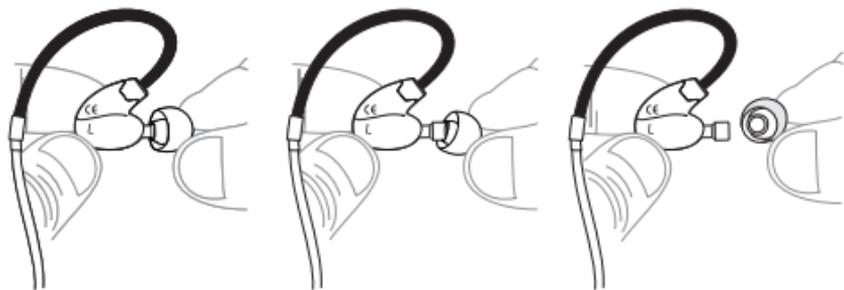

### Installing Eartips

#### STEP 1.

Hold the earpiece in one hand and the eartip in the other with its open end facing the earpiece.




continued on next page

## FIRST USE: SELECTING EARTIPS (Continued)

### Installing Eartips (Continued)

#### STEP 2.

Push the inner tube of the eartip onto the earphone nozzle at an angle and work onto the nozzle.

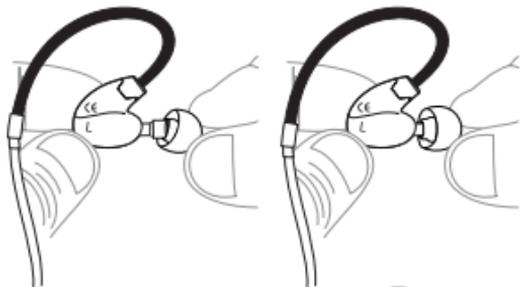


#### STEP 3.

Once on the nozzle, straighten the eartip out and push until the bottom of the eartip is flush against the base of the earphone nozzle (this will push the nozzle through the front of the eartip).



#### STEP 4.

Gently pull the eartip back to desired position. Check to make sure it is installed securely.

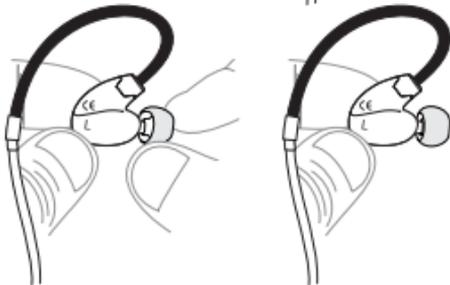


Note: If your music sounds tinny or lacks bass, try different eartips.


## WEARING THE X7 PLUS

The X7 Plus features an over-the-ear fit with a flexible "memory wire" section located near the earpieces. Wearing the earphones correctly will ensure the most comfortable and secure fit:

1. Identify the right and left earpieces.

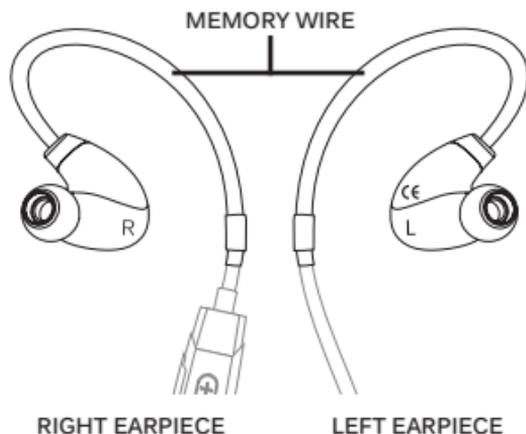


2. Place the cable behind your neck and put the earphones in your ears.

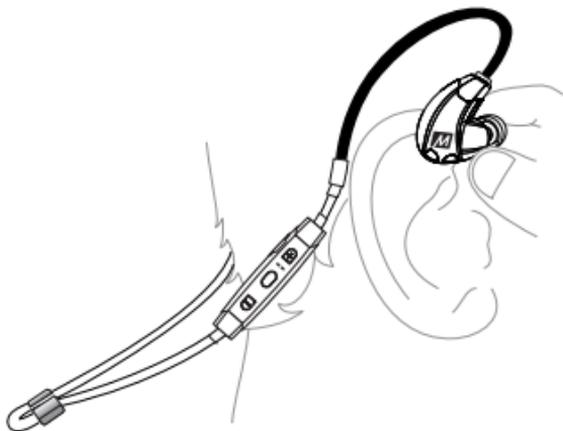


continued on next page

## WEARING THE X7 PLUS (Continued)

3. Adjust each earpiece until it fits flush in your ear and the eartip seals in the ear canal.

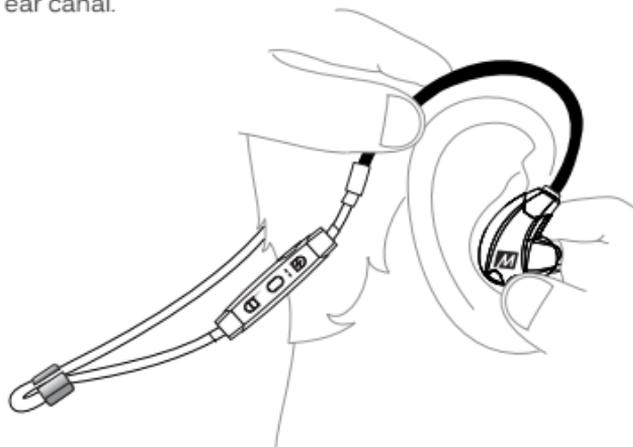

4. Bend the memory wire around your ears to achieve a conforming fit.

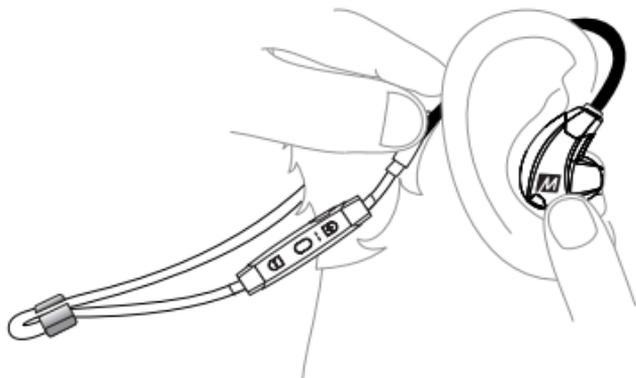

continued on next page

## WEARING THE X7 PLUS (Continued)

5. Tighten the sliding cable cinch to fix the earphones in place for the most secure fit



**CORRECT FIT:** Cable over-the-ear and earphones flush in the ear.

## USE WHILE EXERCISING

The X7 Plus is ideal for exercise as the over-the-ear fit will keep it in place during just about any activity. Tighten the cable cinch behind your neck to make the fit even more secure. If you must remove and reinsert the ear pieces during a workout, avoid getting sweat in the nozzle as this will cause a temporary reduction/loss of sound. Please do not use earphones while performing activities that require you to hear your surroundings.

## TURNING ON AND OFF

To turn on, press and hold the Multifunction button for about 2 seconds. The headset will say "power on" and the blue status indicator light will flash.

To turn off, press and hold the Multifunction button for about 4 seconds. The headset will say "power off" and the red status indicator light will flash.

## PAIRING WITH BLUETOOTH DEVICES

\*\*\* Your headset must be paired to a Bluetooth device before it can be used. It is only necessary to pair your headset once with each device. \*\*\*

1. Make sure the X7 Plus is turned off and within 1 meter of your device. Press and hold the Multifunction button for about 5 seconds until you hear the headset say "Pairing". The status indicator light will flash red and blue in an alternating pattern while the X7 Plus is in pairing mode. (Note: The headset will exit pairing mode if not paired within 2 minutes)
2. Open the Bluetooth menu on the device you wish to pair (see **Locating the Bluetooth menu** section below for more details). Some devices require you to select "search for devices" or "add new device" in order to create a Bluetooth pairing.
3. Wait until you see "X7 Plus" on the screen of your device.
4. Select "X7 Plus" on your device and follow any further prompts to pair. Use "0000" if a pin is required. Once connected, the headset will say "Connection successful".

### LOCATING THE BLUETOOTH MENU:

#### iPhone, iPad, and iPod touch

- a) On your device, open the **Settings** menu
- b) Select **Bluetooth**. If Bluetooth is not on, turn it on.  
The iPhone/iPad/iPod® will automatically search for new devices

#### Android™ Phones and Tablets

- a) On your device, open the **Settings** menu
- b) Select **Bluetooth** (on older Android devices **Bluetooth** is found in the **Wireless & Networks** menu). If Bluetooth is not on, turn it on. Select "Search for Devices" if your phone or tablet does not automatically search for new devices

#### Windows® Phone 8 devices

- a) On your device, open the **Settings** menu
- b) Select **Bluetooth**. If Bluetooth is not on, turn it on.  
The Windows phone will automatically search for new devices

#### Computers, Laptops, and Other Devices

Visit the Bluetooth Support Page at [www.MEEaudio.com](http://www.MEEaudio.com) for pairing, connecting, and setup information.

If pairing fails after several tries, please refer to your device's user manual for additional information. Visit the Bluetooth Support Page at [MEEaudio.com](http://MEEaudio.com) for instructional pairing videos and troubleshooting information.

## CONNECTING TO PAIRED DEVICES

Once the X7 Plus is turned on, it will automatically connect with the last paired Bluetooth device that is on and within range. If the X7 Plus is not connected automatically, tap the Multifunction button to initiate connection with last paired device. If the headset still does not connect, open the Bluetooth menu on your device and select "X7 Plus" from the Bluetooth device list.

Note: Device must be set to allow automatic connections.

On some computers, Bluetooth audio must be enabled manually every time you connect.

## CONTROLS

The X7 Plus can control media and phone calls from a smartphone or tablet.

### Adjusting Volume

Function	Operation	Notes
Increase volume	Short press the Volume up ( + ) button	Headset will produce a tone when volume reaches the minimum or maximum level.
Decrease volume	Short press the Volume down ( - ) button	

Note: volume adjustments made while playing media will change the volume of the headset independently of the connected device. Raise or lower device volume as needed to further increase or decrease the overall volume. Some newer devices use AVRCP 1.3 Bluetooth Profile, which will allow the X7 Plus to control the device volume directly.

### Controlling Phone Calls

Status	Function	Operation
Incoming call	Answer call	Press the Multifunction button
	Reject call	Press and hold the Multifunction button for 2 seconds
Call in progress	End call	Press the Multifunction button
	Mute/Un-Mute call	Press and hold the Volume Down ( - ) button for 2 seconds
	Transfer call to headset	Press and hold the Volume Up ( + ) button for 2 seconds
Call in progress, phone handset active*	Transfer call to headset	Press and hold the Volume Up ( + ) button for 2 seconds

continued on next page

## CONTROLS (Continued)

### Controlling Phone Calls (continued)

Status	Function	Operation
Call in progress, second incoming call	Hang up current call and answer new call	Press the Multifunction button
	Place current call on hold and answer new call	Press and hold the Multifunction button for 2 seconds
One call active, one on hold	Switch active calls	Press and hold the Multifunction button for 2 seconds
	End current call and switch to call on hold	Press the Multifunction button

\* If you answer a call from your phone when a headset is connected, some phones will activate the phone handset

### Controlling Media Playback

Status	Function	Operation
No media playing* (standby mode)	Play media	Press the Multifunction button
Media playing	Pause media playback	Press the Multifunction button
Media playing or paused	Skip to next track**	Long press the Volume Up (+) button
	Restart the track/ previous track**	Long press the Volume Down (-) button

\* You may need to focus on the media player application by bringing it up on the screen for initial playback to start.

\*\* Not all media players support this functionality.

Note: If you answer or make a call while listening to media, the media will be paused until the call has ended.

### Additional Functionality

Status	Function	Operation
Standby mode*	Activate Siri® / voice command / voice dialing**	Press the Volume Up (+) and Volume Down (-) buttons simultaneously. Press again to cancel.
Media playing or standby mode*	Redial last call**	Double press the Multifunction button
Dialing a call	Cancel dialing	Press the Multifunction button

\* Standby mode: the headset is connected but with no media playing and no phone calls in progress.

\*\* Not all devices support this functionality. For more information, refer to the user manual for your device.

## MULTIPOINT

### Multipoint Pairing

Multipoint allows two Bluetooth devices to be connected to the X7 Plus simultaneously. Both devices will need to be paired before multipoint can be used.

To use two Bluetooth devices with the X7 Plus, first pair them by following the pairing procedure described in the **Pairing with Bluetooth devices** section for each device and then turn off the headset.

When turned on again, the X7 Plus will automatically attempt to connect to the 2 most recently-paired devices, as long as they have Bluetooth enabled and are within range. If a device that has already been paired does not connect automatically, select "X7 Plus" from the Bluetooth menu of the device.

If you no longer wish to connect to multiple devices, disable Bluetooth on the device you do not want connected to the X7 Plus or remove the "X7 Plus" pairing from the Bluetooth menu of the device.

### Multipoint Functionality

Status	Function	Operation
Media playing on one device	Play media on other device	Pause audio playback on the active device and start audio playback on the other connected device*

\*It may take up to 60 seconds for audio to switch

Incoming calls will always take precedence over media. If media is playing on one device and an incoming call is received on the other device, the X7 Plus will pause the media on the active device and activate the device with the incoming call. Once the call has ended, the X7 Plus will reactivate the original device and resume playback (with most media applications).

For phone call controls, see the **Controlling Phone Calls** section.

## LED INDICATOR LIGHTS

The status indicator light of the X7 Plus is located on the remote.

Headphone Status	Indicator Light
Charging	Solid red status indicator light
Fully charged	Solid blue status indicator light
Pairing mode	Status indicator light flashes red and blue in an alternating manner
Powered on but not connected	Status indicator light flashes blue once every 10 seconds
Powered on and connected to Bluetooth device	Status indicator light flashes blue twice every 5 seconds
Incoming call	Status indicator light flashes blue continuously

## TROUBLESHOOTING

### Factory Reset (clear paired devices)

A factory reset will clear all paired devices from the memory of the X7 Plus. To perform a factory reset, first put the headset in pairing mode as described in the Pairing with Bluetooth devices section. Once in pairing mode, press and hold all three remote buttons simultaneously for approximately 5 seconds. The red LED indicator light will flash 5 times once the memory has been cleared, and the unit will automatically enter pairing mode to be paired with a new device.

### Hard Reset

To perform a hard reset, insert the charging cable and at the same time press and hold the Multifunction button until the earphone turns on. Unplug the charging cable and plug it back in to complete the reset.


Visit [MEEaudio.com](http://MEEaudio.com) for additional Bluetooth information and troubleshooting.

## SAFETY AND CARE

- When not in use, power the headset off and store in the included protective carrying case.
- Battery performance will be severely decreased when stored in extreme temperatures: below  $-10^{\circ}\text{C}/14^{\circ}\text{F}$  or above  $45^{\circ}\text{C}/113^{\circ}\text{F}$  including direct sunlight.
- There are no user replaceable/reparable parts in the headset. Disassembling it will void your warranty.
- If the device comes in contact with liquids, quickly wipe away. If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- Do not use around flammable gasses as fire or explosion may occur
- Keep the device and packaging out of reach of children
- Replacement accessories are available online at [www.MEEaudio.com](http://www.MEEaudio.com)

## CLEANING INSTRUCTIONS

- a) Remove ear tips from earphones
- b) Take a cotton swab damp with a small amount of rubbing alcohol or soapy water. Swab the body of the earphones and eartips. Note: Eartips can also be submerged fully in rubbing alcohol or hydrogen peroxide
- c) Allow the earphones and eartips to dry completely
- d) Put the eartips back on the earphones, making sure they are fitted securely

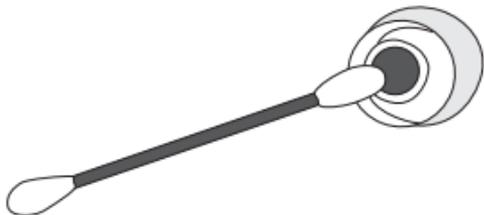

## WARNING

Using headphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level.

## SPECIFICATIONS

See the X7 Plus product page at [www.MEEaudio.com](http://www.MEEaudio.com) for product specifications.

## WARRANTY:

The X7 Plus is covered by a 1-year manufacturer warranty. For more information, visit [www.MEEaudio.com](http://www.MEEaudio.com).

**X7** Plus

**MEE** audio

---

MEE audio and its logo are registered trademarks of S2E, Inc. All rights reserved.

iPhone®, iPad®, iPod®, iPod touch®, and Siri® are registered trademarks of Apple Inc.

Android™ is a registered trademark of Google Inc.

Windows® Phone is a registered trademark of Microsoft Corporation in the United States and other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MEE audio is under license. Other trademarks and trade names are those of their respective owners.



[www.MEEaudio.com](http://www.MEEaudio.com)  
[support@MEEaudio.com](mailto:support@MEEaudio.com)