




AIRHOOKS PRO

OPEN EAR DIRECTIONAL
AUDIO HEADPHONES


FULL USER MANUAL ON THE INSIDE 

Quick Start

1. Remove film and return
earpieces to case

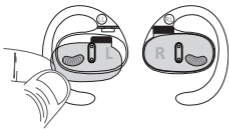

2. Charge for 2 hours

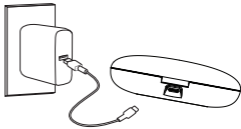

3. Open lid to automatically
enter pairing mode



4. Open your device's
Bluetooth menu and select
"MEE audio Airhooks Pro"



AIRHOOKS PRO SETUP GUIDE




Scan the QR code or visit:
MEEaudio.com/AirHooksProSupport

How to Wear

STEP 1



STEP 2

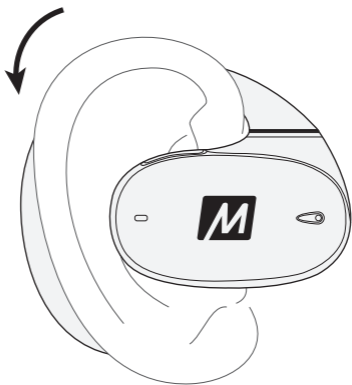


Replacing the Earhooks


The AirHooks Pro comes with two sets of interchangeable earhooks: one large set (labeled LL/RL) and one small set (labeled LS/RS).

The large earhooks come pre-installed and can be released with the smaller set if needed.


1. Remove the original earhooks as shown

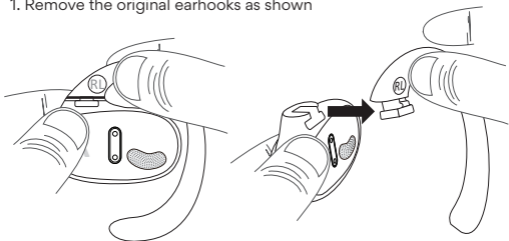

2. Identify the left and right markings on the new earhooks

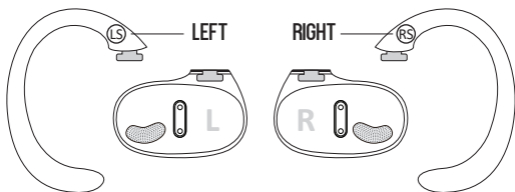

3. Align each earhook with the groove on the corresponding earpiece and slide it in until it snaps into place

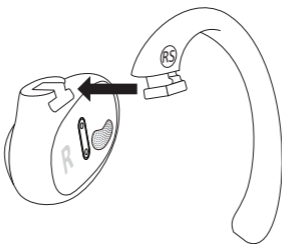

Functionality & Controls

Intuitive Touch Controls



LEFT



RIGHT

Press and hold 4s while off	Turn on	
Press and hold 4s	Turn off	
Tap 1x	Volume down	Volume up
Tap 2x	Play / pause / answer phone call / hang up	
Tap 3x	Activate Siri® / Google Assistant™	
Press and hold 2s	Previous track	Next track
	Decline incoming call	

Charging the Earpieces

Place the earpieces into the case to initiate charging.

The charging indicator light for each earpiece is displayed on the front of the case.

The first light represents the left earpiece, and the fourth light represents the right earpiece.




Left earpiece
charging



Right earpiece
charging

Charging the Case

The case can be charged using the provided USB-C cable, or wirelessly using a wireless charging pad (not included). The lights on the front of the case will flash in order until the case reaches 100% charge.

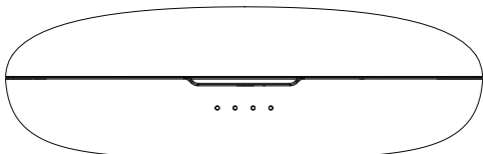


Case Battery Indicator Lights (While Charging)

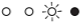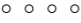 Lights flashing in order	Case charging
 All lights solid	Case charged

Case Battery Indicator

1. Remove USB-C cable from case
2. Open or close lid to activate battery indicator light pattern

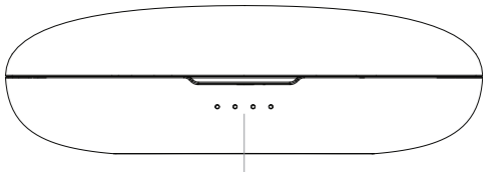


Case Battery Indicator Light

1 solid light	Case battery \leq 25%
2 solid lights	Case battery \leq 50%
3 solid lights	Case battery \leq 75%
4 solid lights	Case battery \leq 100%


Pairing

The AirHooks Pro will automatically enter pairing mode when using them for the first time.

You can also initiate pairing mode by pressing and holding the sync button on the case until the case lights flash (approximately 5s).

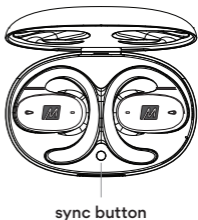

1. Remove the plastic film from each earpiece and place them back into the case

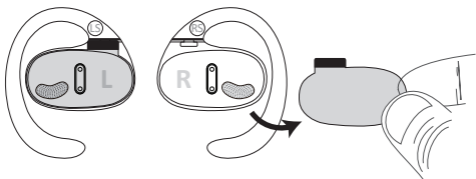

2. Close the lid and wait 5 seconds
3. Open the lid to enter pairing mode, indicated by flashing red and white lights on each earpiece.
4. Open the Bluetooth menu on your device and select "MEE audio AirHooks Pro"
5. Once pairing is complete, the indicator lights on the earpieces will stop flashing red and white.



Subsequent Use

The AirHooks Pro will automatically reconnect to the last paired Bluetooth device upon opening the case lid.

*If your AirHooks Pro do not auto-reconnect, you can initiate reconnection by performing the following steps:

1. Place the earpieces back into the case and close the lid
2. Wait 5 seconds
3. Reopen the lid and select "MEE audio AirHooks Pro" from the list of your paired devices in your Bluetooth menu.

Pairing Another Device

To pair the AirHooks Pro to a new Bluetooth device, first unpair the AirHooks Pro from your original device using its Bluetooth menu or turn off the Bluetooth functionality on the original device altogether.

The AirHooks Pro will automatically enter pairing mode if a previously paired device is not found.

Select “MEE audio AirHooks Pro” in the Bluetooth menu of the new device you wish to pair to complete the pairing process.

Factory Reset

A factory reset can be used to restore all features to their factory settings and delete all previous Bluetooth pairings from memory.

1. Place the earpieces into the case
2. Press and hold the sync button on the case until the earpieces flash red two times (approximately 10s). Once the reset is complete, the earpieces will go directly into pairing mode.



Warranty

This product is covered by a 1-year manufacturer warranty. For more information, visit [MEEaudio.com/support](https://www.MEEaudio.com/support).

MEE audio and its logo are registered trademarks of S2E, Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MEE audio is under license. Other trademarks and trade names are those of their respective owners.

Siri® is a registered trademark of Apple Inc.
Google Assistant is a trademark of Google Inc.