

NEVER LOSE FOCUS



X6 PLUS WIRELESS SPORTS IN-EAR HEADPHONES

Model: X6Plus

www.MEEaudio.com/X6Plus

SPORTS EARPHONES FIT GUIDE

Please visit the Sports Earphone Fit Guide at www.MEEaudio.com/Fit for easy-to-follow video guides to ensure the best fit. comfort and sound.



PACKAGE CONTENTS



X6 Plus Stereo Bluetooth Wireless Sports In-Ear Headphones



Micro-USB charging cable



User manual

4 pairs of eartips

CHARGING

Connect the charging cable to any powered USB port and to the charging port located on the headset's remote control. Charge time is approximately 2 hours. The status indicator light will stay red while charging and turn blue when fully charged.

Note: For maximum sweat resistance, make sure that the USB port cover is closed completely after charging the headset.

When the battery is low, the headset will say "battery low" and a red light on the remote will flash periodically.

Apple® devices such as the iPhone®, iPad®, and iPod touch® will also display an on-screen headset battery indicator while the X6 Plus is connected.



Button (O) Charging Port

 Volume Down / Previous Track Button (—)

5. Status Indicator Light

6. Micro-USB

WEARING THE EARPHONES STEP 1: SELECT AND INSTALL THE CORRECT EARTIPS

The X6 Plus is an in-ear headphone and relies on a tight seal between the eartips and your ear canals to deliver good bass response and overall sound quality. Four sizes of eartips are included to help you achieve the best fit. We recommend trying all of included eartips and selecting the ones that provide the best sound and comfort for your ears.

Choose eartips that:

Microphone

3. Multifunction

 Volume Up / Skip Track Button (+)

- · Allow the earphone to fit flush in your ear
- Seal with your ear canal and reduce outside noise when inserted
- Provide the best bass response



Install eartips as shown. Make sure eartips are



WEARING THE EARPHONES (CONT.)

STEP 2: INSERT INTO FARS

The X6 Plus earphones feature an over-the-ear design with Flex-wire earhooks.

To put on the X6 Plus, first identify the right and left earpieces as indicated by the "R" and "L" markings. They are not interchangeable.



Place the cable behind your neck, route the earhooks around your ears, and put the earpieces in your ears. Adjust each earpiece until it fits flush in the ear and the eartip seals in the ear canal.



BLUFTOOTH PAIRING

Your headset must be paired to a Bluetooth device before it can be used. It is only necessary to pair your headset once with each device

Make sure the X6 Plus is turned off and within 3 feet (1 meter) of your device. Put the headset in pairing mode by holding the Multifunction button for about 4 seconds until the status indicator light begins to flash red and blue in an alternating pattern and the headphone says "Pairing".

Phones and tablets

Open the Settings menu and select Bluetooth. If Bluetooth is not on, turn it on. Select "Search for Devices" or "Refresh" if your phone or tablet does not automatically search for new devices.

Other devices
Visit www.MEEaudio.com/Bluetooth for pairing & setup information.

Wait until you see "MEE audio X6 Plus" on the screen of your device. Select it and follow any further prompts to pair. Use "0000" if a pin is required. Once connected, the headset will say "Connected" and the blue indicator light will flash two times every 3 seconds.

If pairing fails, please refer to your device's user manual for further information. Visit the Bluetooth Support Page at MEEaudio.com/Bluetooth for instructional pairing videos and troubleshooting information.

WEARING THE EARPHONES (CONT.)

CORRECT FIT

The earphone sits flush in the ear and the cable is secure behind the ear.

When worn correctly the earphones will reduce outside noise and deliver good bass impact.

If you do not get much bass or hear tinny sound with excessive treble presence, readjust the fit of the earphones in your ears and/or try a different size of eartips.

Note: If you must remove and reinsert the earphones while working out, avoid getting sweat in the nozzle as this may lead to a temporary reduction/loss of sound.

(OPTIONAL) IMPROVING PHONE CALL PERFORMANCE

For best microphone performance during phone calls the X6 Plus can be worn with the wire in the front to improve microphone positioning. Orient the microphone towards your mouth to ensure the clearest and loudest voice pickup.



CONNECTING TO PAIRED DEVICES

When powered on, the X6 Plus will automatically connect with the most recently paired and/or connected Bluetooth device that is powered on and within range. If the headset does not connect automatically. open the Bluetooth menu on your device and select "MEE audio X6 Plus" from the Bluetooth device

CONNECTING TO MORE THAN ONE DEVICE (MULTIPOINT)

Multipoint is a feature that allows two Bluetooth devices to be connected to the X6 Plus simultaneously. Both devices will need to be paired before multipoint can be used by following the pairing procedure described in the BLUETOOTH PAIRING section for each device. Once paired with both devices, power on the X6 Plus on and wait until it connects to the last paired device. Then, select "MEE audio X6 Plus" from the Bluetooth menu of second device you wish to connect. The headset cannot be connected with more than two devices at a time.

Note: Headset operating range and battery life may be reduced when maintaining two connections via Multipoint

MULTIPOINT FUNCTIONALITY

To switch between the two devices, pause audio playback on the active device and start audio playback on the other connected device. It takes several seconds for the audio to switch

Incoming calls will always take precedence over media. When a call comes in, the X6 Piot will automatically activate the device with the incoming call. Some devices, such as computers and standalone audio transmitters, may not allow audio switching except when a phone call occurs.

If you no longer wish to connect to multiple devices, disable Bluetooth on the device you do not want connected to the X6 Plus or disconnect the "MEE audio X6 Plus" using the Bluetooth menu of that device.


SAFFTY & CARE

- To clean, remove the eartips and rinse them under running water. Clean the earphones using a cotton swab damp with a small amount of rubbing alcohol. Allow the earphones and eartips to dry completely before resuming use
- Use only the supplied Micro-USB charging cables or compatible replacements from a reputable manufacturer
- Battery performance will be severely decreased when stored in extreme temperatures: below -10°C/14°F or above 50°C/122°F, including direct sunlight
- The lifetime of the battery will be significantly reduced if your headset is not charged for a long time. It is recommended to charge your headset at least once a month.
- There are no user replaceable/reparable parts in the headset. Disassembling it will void your warranty.
- If the device comes in contact with liquids, quickly wipe away. If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- Do not use around flammable gasses as fire may occur
- Keep the device and packaging out of reach of children

FACTORY RESET

A factory reset will clear all paired devices from memory. To perform a factory reset, put the headset in pairing mode as described in the BLUETOOTH PAIRING section, then presand hold the Volume up and Volume down buttons at the same time for 2 seconds. The headset will produce three tones and the blue indicator light will flash to indicate the memory has been cleared. The headset will need to be paired with a Bluetooth device before use.

FUNCTIONALITY & CONTROLS

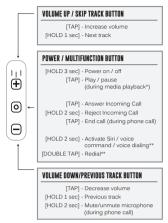

- * You may need to bring your preferred media player application up on the screen for media playback to start.
- application up on the screen for media playback to start.
 Not all devices support this functionality. For more information, refer to the user manual for your device.

WARNING

Using headphones at high volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety. Turn the volume all the way down after connecting your earphones, then gradually increase the volume until you reach a comfortable listening level. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

TROUBLESHOOTING

Visit the Bluetooth Support Page at MEEaudio.com/Bluetooth for troubleshooting procedures. For any additional questions, visit MEEaudio.com/Support or email support@MEEaudio.com

WARRANTY

This product is covered by a 1-year manufacturer warranty when purchased from an authorized retailer. For more information, contact your local MEE audio dealer or visit MEEaudio.com/Support

Have a question? Email support@MEEaudio.com

MEE audio and its logo are registered trademarks of S2E, Inc.



www.MEEaudio.com support@MEEaudio.com



